### NEXT GENERATION DIGITAL LOAD CELLS

Robust digital load cells Tolerate up to 1000% overload Accuracy up to OIML C6 (MI10) Easy installation Stainless steel (IP68) ATEX certified zone 1, 2, 21, 22 Patented worldwide

Trusted in over 85 countries worldwide



Eilersen - Experts in Weighing Since 1969

### NEXT GENERATION DIGITAL LOAD CELLS

### Experts in Weighing since 1969

Since the foundation in 1969, the Eilersen companies in Denmark and Switzerland have been dedicated to the development, manufacture and supply of high quality robust industrial sensors based on a capacitive measurement principle.

This extensive know-how is patented worldwide and invested in the current range of digital load cells. The capacitive technology developed by Eilersen features a number of advantages compared to other technologies used in sensors for measuring force and weight.

The Eilersen load cells feature excellent specifications, high reliability, simple installation and minimal maintenance for the use in tough and demanding industrial environments. Eilersen load cells are available with Profibus DP, DeviceNet, EtherNet/IP, EtherCAT, Modbus ASCII/RTU, RS485/422, RS232, 4-20mA and 0-10VDC interfaces, and can be supplied in OIML and ATEX certified versions.

The Eilersen customers are found among leading companies in more than 85 countries worldwide.

#### Certificates

HSI (	CERTIFICATE	EC Type-Approval Certificate	electronality
	No. SEC INTERACION(.)	No. 56, 6799 M Broken 7	- Hidamanythiantsinprog
-	Property lies and an and	Ter Traini	<ul> <li>permittent complete the second se second second sec</li></ul>
	M. N. MCCHILLERANDON AND A	teatre Billion Contraction	2.5 millioner
-	Manual Association	the second se	i har bernen
	the set of the second second second	The Agence	· Street Content of State and Street
200		Instance Designed in the local division	Contraction of the local division of the loc
-	Inconstrument Inconstrument Inconstrument	Control of the second second second	
-	with the second second second	De la des constantes de la constantes de la constante de la co	<ul> <li>An other participants of the second se</li></ul>
_	and the second se	Second and the second states of the second states o	a hard a state way of the
===	the second se	Researcher .	
	Carlos . M. 1994C . 1994C . arter	tata Bill Anti-Anti-	And.
-			
-	and here there	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	And and a second s
	CONTRACTOR OF A DESCRIPTION OF A DESCRIP		and the second sec

OMIL R60

EC Type Approval

ATEX

 Eilersen
 Image: Construction of the second seco






# Process Installation Examples





### 2000 Generation Load Cells

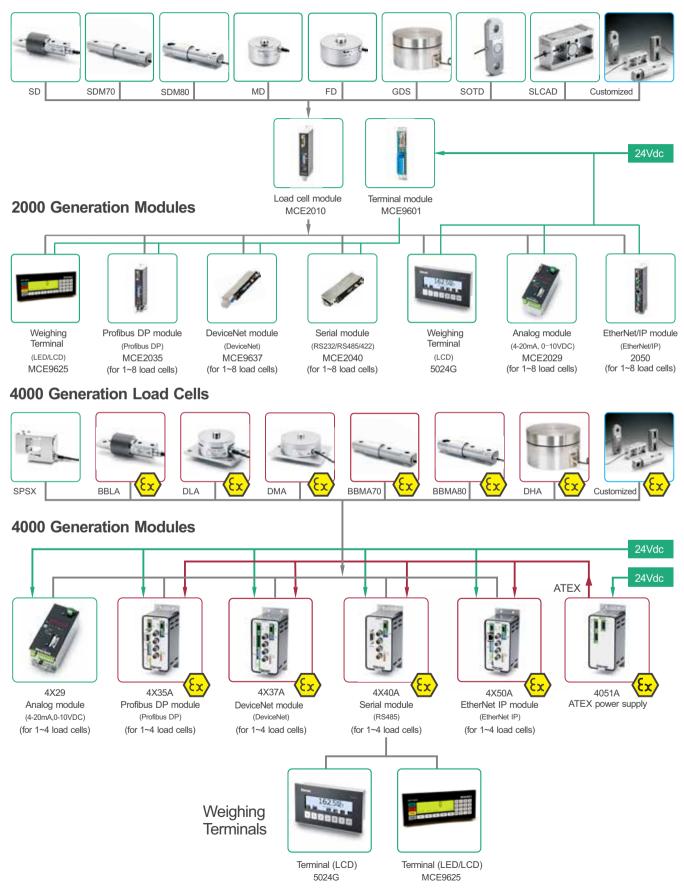


### Load Cell Overview

			No. of the second se	E.F.	(uiter)	E Contraction of the second se			
NON-ATEX	SD	SDM	SPSX	SPSXL	MD	FD	GDS		
ATEX	BBLA	BBMA	SP5075A		DLA	DMA	DHA		
Load Cell Type									
Compression									
Bending Beam									
Single Point									
Load Cell Features									
Digital									
Stainless Steel									
IP68									
Robust									
Applications									
Process Weighing									
Tank, Vessel & Silo									
Filling & Dosing									
Level Measurement									
Dynamic Weighing									
Scales									
Conveyer Belts									
Heavy Duty									
On-Board Weighing									
Offshore Applications									
Specifications									
Maximum Capacity	1.000kg	7.500kg	150kg	150kg	5.000kg	50.000kg	500.000kg		
Overload Tolerance	> 300% of Rated Capacity								
Output Options	RS485, Profibus DP, DeviceNet, EtherNet/IP, Modbus ASCII/RTU, 4-20mA, 0-10Vdc, EtherCAT, ProfiNET (pending)								



www.eilersen.com | 5



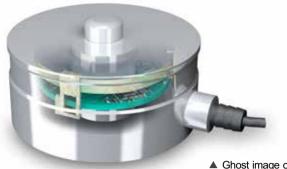

▲ Ghost image of digital compression load cell showing ceramic sensor and pcb

### DIGITAL CAPACITIVE TECHNOLOGY

The Choice for Industrial Applications

The Eilersen digital capacitive technology is based on a non-contacting ceramic sensor mounted inside the load cell body. As the load cell contains no moving parts and the ceramic sensor is not in contact with the load cell body, the load cell tolerates very high overloads, sideloads, torsion and welding voltages.


Therefore, the mechanical installation of the load cell can be done without expensive and complicated mounting kits and overload protection devices.

The capacitive measurement from the ceramic sensor is directly converted to a RS485 signal which is transmitted through the single wire RG-58 coaxial cable to a weighing module.


The technology and mechanical design of the Eilersen load cells is covered worldwide by a number of patents.


Capacitive load cell




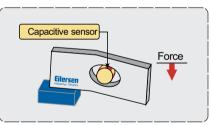






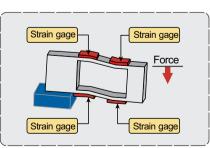

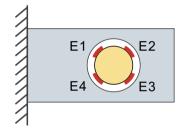

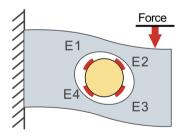

The Eilersen digital capacitive technology is based on an accurate and stable ceramic sensor, which is non-contacting and therefore unaffected by overloads, sideloads, torsion and welding voltages.





### DIGITAL CAPACITIVE TECHNOLOGY (continued...) The True Digital Weighing Solution

The electrical installation of the Eilersen digital load cell is pure plug-and-play as the signal from the non-contacting sensor is directly converted, compensated and calibrated by a microprocessor in the load cell to a digital output in grams, kilograms, or Newton. Measurements and status codes are transmitted on the single

wire coaxial load cell cable (RG-58) which may be up to 100 meters long.

This design results in unsurpassed flexibility, high data rates and allows for connection to a wide range of equipment and interfaces (PLCs, PCs, Weighing Terminals, Displays, Profibus DP, EtherNet/IP, EtherCAT, DeviceNet, Modbus ASCII/RTU, RS232, RS485/422, 4-20mA, and 0-10VDC).

#### High Accuracy and Easy Installation


Eilersen load cells are factory calibrated and compensated to ensure the highest accuracy (up to OIML C6 MI10) and quality on the market.

The robustness of the Eilersen load cells allows a very simple and hygienic mechanical installation. The simple installation eliminates the need for maintenance and reduces the total cost of ownership.

The load cell cable can be mounted on-site if necessary and the cable length (up to 100 meters) has no influence on the calibration of the load cell.

It is possible to monitor the load and status of each individual digital load cell which provides visibility, easy troubleshooting and saves time during commissioning.



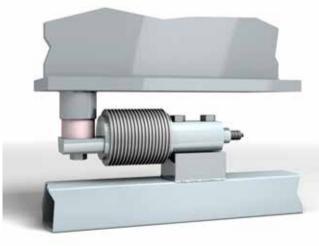

▲ Hygienic tank weighing installation

▲ Simple installation of Eilersen beam load cells



# CHOOSE EILERSEN WEIGHING SOLUTIONS

# Part 1

#### No. 1 Robust Load Cells for Industrial Applications

The Eilersen load cells tolerate very high overloads, sideloads and torsion. The load cells are hermetically sealed (IP68) to ensure superb waterproof protection for tough industrial applications. Furthermore, the load cells are available in capacities up to 500ton.

#### No. 2 Simple Mechanical Installation

Mechanical protection devices are not necessary when installing Eilersen digital load cells. This is an important cost and maintenance saver.

#### No. 3 Simple Electrical Installation

The Eilersen digital load cells feature true plug-and-play installation as the load cells are pre-calibrated to transmit the load directly in gram, kilogram, ton or Newton which eliminates the need for on-site calibration in many applications.



#### No. 5 Excellent Specifications

The Eilersen digital load cells can be supplied in very high accuracy (up to OIML C6 MI10) while still maintaining a very high overload tolerance.



▲ Installations in more than 85 countries worldwide

No. 4 ATEX Certified Solutions

The Eilersen weighing solutions are ATEX certified for installation in ATEX Zone 1, 2, 21, and 22.

Eilersen - Experts in Weighing Since 1969







#### No. 6 Hygienic Installations

The simple mechanical installation without overload protection devices ensures hygienic installations with a minimal need for maintenance.

#### No. 7 Dynamic Applications

The Eilersen digital load cells feature sampling rates of up to 1.000 measurements per second and a deflection of less than 100µm at Rated Capacity.

These characteristics result in a high frequency of resonance which together with a wide variety of digital filters makes it possible to achieve a very fast response for dynamic applications.



Hygienic weighing solutions for food and pharma industries



### CHOOSE EILERSEN WEIGHING SOLUTIONS **TOP 10 REASONS**

# Part 2

#### No. 8 Intelligent Load Cells with Integrated Diagnostics

For solutions using the Eilersen digital load cells, it is possible to monitor the load and status of each individual load cell with the integrated diagnostics feature.

The Eilersen digital load cells will send an error code if maintenance should be required for fast and easy troubleshooting.

Furthermore, a damaged load cell can be exchanged without the need for recalibration. This is an important feature in high capacity applications where it is difficult to find calibration weights.









▲ Installations in more than 85 countries worldwide



#### No. 9 Easy Integration

Electronic modules are available for converting the data output from the Eilersen digital loads cells to a host of standard industrial interfaces (Profibus DP, DeviceNet, EtherNet/IP, EtherCAT, Modbus, RS485/422, RS232, 4-20mA, 0-10Vdc).

The digital technology is optimal for equipment with more than one load cell as several load cells can be connected to a single digital com port and thereby avoiding cabling and analog input cards.

#### No. 10 Quality

All Eilersen load cells are individually calibrated and compensated to ensure that all load cells meet the highest quality standard on the market.





▲ Solutions for web tension measurement

▲ Installations in food processing lines



# Customized Load Cell Examples



▲ Customized load cells



# Weighing Terminals



▲ Weighing terminal type 5024G mounted in stainless steel box



# Hygienic Robust Scales

Eilersen has developed a range of scales to meet the increasing demands from the food and pharmaceutical industries

Scales integrated in the production process have to meet the requirements to hygiene while being so robust that a forklift can drive into or over the scale without damaging the load cells. Furthermore the scale must to be very safe and easy to clean.

# The range of hygienic and robust scales from Eilersen fulfils these requirements.

Safe and easy to clean

## **Special Features**


- Very robust and hygienic design
- Can handle up to 300% overload
- Equipped with Eilersen robust digital load cells
- Available in many different configurations
- Available with local indicator and/or interface to PLC or PC
- Weighing capacity up to 5.000kg



Robust scale without bacterial traps



Very safe to handle

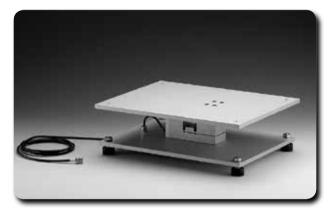

Robust bench scales



Easy to clean

## Options

- Customized versions can be made by request
- Can be supplied in versions that can be certified for sale
- Can be supplied in versions for installation in ATEX Zone 1, 2, 21 or 22



Customized stainless steel scales

## **Specifications**

- Capacity: Up to 5.000kg
- Dimensions: can be made according to customer requirements
- Material: AISI304 or 316
- Power supply: 230VAC or 24VDC +/- 10%, min. 2A

- · Local Indicator and/or interface to PC/PLC
  - Profibus DP
  - DeviceNet
  - EtherNet/IP
  - Modbus ASCII/RTU
  - 4-20mA
  - 0-10Vdc
  - EtherCAT (pending)
  - ProfiNet (pending)

Eilersen Electric Digital Systems A/S Kokkedal Industripark 4 DK-2980 Kokkedal Denmark Tel: +45 49 180 100 Fax: +45 49 180 200 info@eilersen.com

www.eilersen.com